
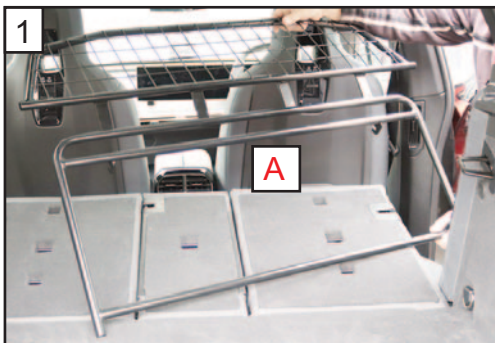


BMW iX (i20)


Dog Guard

Part No. 51 47 5 A6A A75

sheet 1 of 1

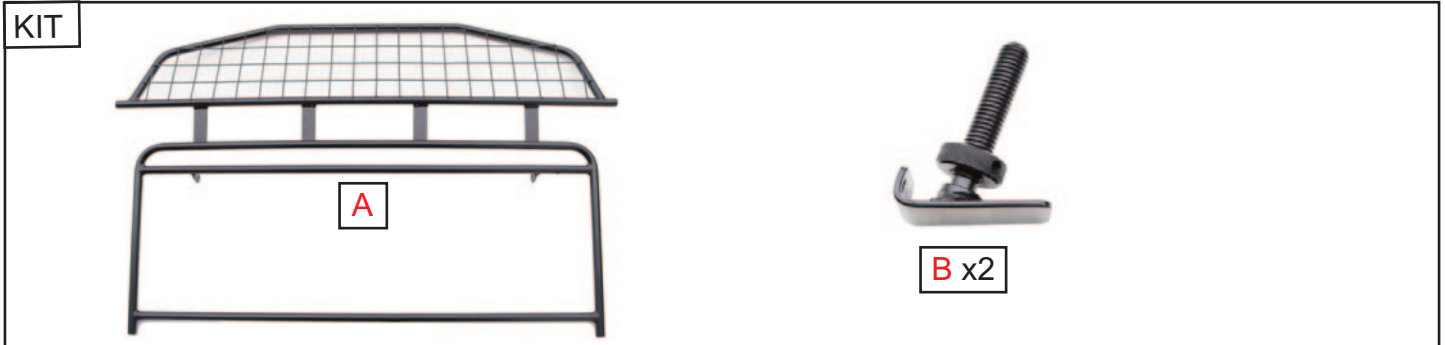

Drop the Rear seats.
Insert the Dog Guard.
The mesh goes to the rear of the car.

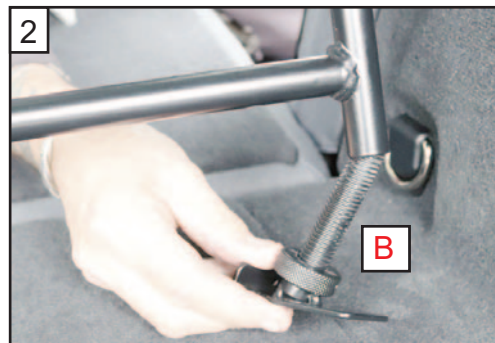

Insert both Adjustable Feet 'B' into the Dog Guard lower tubes.
The return faces the front of the car.




Raise the Rear Seats.
Place the Dog Guard in its approximate position.



For positioning reference, the return on 'B' the Adjustable Feet, will sit against the back rests.




Push the Guard forward and ensure the hooks on the Dog Guard fit under the bars located in back of the rear seats. Hold in position.

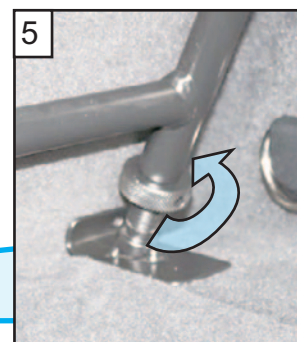

Tighten the Adjustable Feet equally on both sides until the Dog Guard is secure.



Re-install the parcel shelf if required.

 Frequently check the tension of the Adjustable Feet to ensure correct fitment.