

2021+ TESLA MODEL S, S PLAID Installation Instructions









Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick.

ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

MF101 KIT CONTENTS <i>CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION</i>			
MUD FLAP KIT PN: MF101	SEE PAGE 4 DRAWINGS	PART DESCRIPTION	QUANTITY
MF101-LF		LEFT FRONT	1
MF101-RF		RIGHT FRONT	1
MF101-LR		LEFT REAR	1
MF101-RR		RIGHT REAR	1
HARDWARE KIT PN: HMF101	SEE PG 4		
.25SP		SPACER	2
1SS#8		SCREW	6
15TAB		TAB	6
EXPANCH		EXPANSION ANCHOR	6
RACLP		CLIP	10
SMWASH		WASHER	6



ALWAYS TEST COMPATIBILITY
WITH YOUR SPECIFIC WHEEL,
TIRE AND SUSPENSION
COMBINATION



ALWAYS USE
CAUTION DURING
PARKING/REVERSAL
SCENARIOS



CLEANING INSTRUCTIONS:
USE WATER AND SOFT CLOTH
TO CLEAN FLAPS. AVOID
SOLVENT BASED CLEANERS



2021+ TESLA MODEL S, S PLAID Installation Instructions

FRONT MUD FLAP

Bracket & Hardware 1 x Front Flap → 1 x 1SS#8; 3 x 15TAB; 1 x EXPANCH; 3 x RACLP; 1 x SMWASH

To access interior wheel well, turn steering wheel towards installation side.

FIGURE A Remove factory fastener 1.

FIGURE B/C Fold EXPANCH prior to installing into mount 1. Use a pick to open mounting hole. Align flap then install SMWASH & 1SS#8 through flap and EXPANCH. Do not fully tighten.

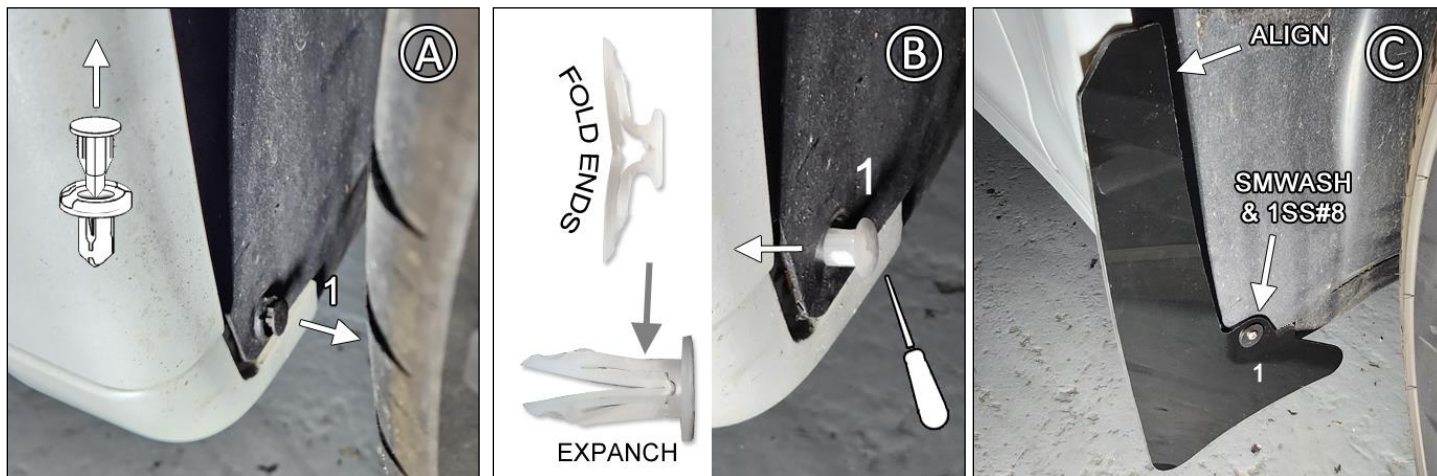


FIGURE D Align flap edge against fender edge. Clean area behind fender edge before adhering **15TAB 8.75"** from top of flap to center of **15TAB**. Adhesive side faces tire.

FIGURE E For **mount 2**, ensure flap lays flat against fender edge, then install **RACLP 8.75"** from top of flap to center of **RACLP**. **RACLP** clips over **15TAB** and flap.

FIGURE F For **mount 3**, place **RACLP 6"** from top of flap to center of **RACLP** & **15TAB**. **Mount 4**, place **RACLP 2"** from top of flap to center of **RACLP** and **15TAB**. **RACLP** clips over **15TAB** and flap.



2021+ TESLA MODEL S, S PLAID Installation Instructions

REAR MUD FLAP

Hardware 1 x Rear Flap → 1 x .25SP; 2 x 1SS#8; 2 x EXPANCH; 2 x RACLP; 2 x SMWASH

FIGURE G Remove factory fasteners 1 & 2.

FIGURE H/I Fold EXPANCH before installing into mounts 1 & 2. Use pick to expand EXPANCH mounting holes.


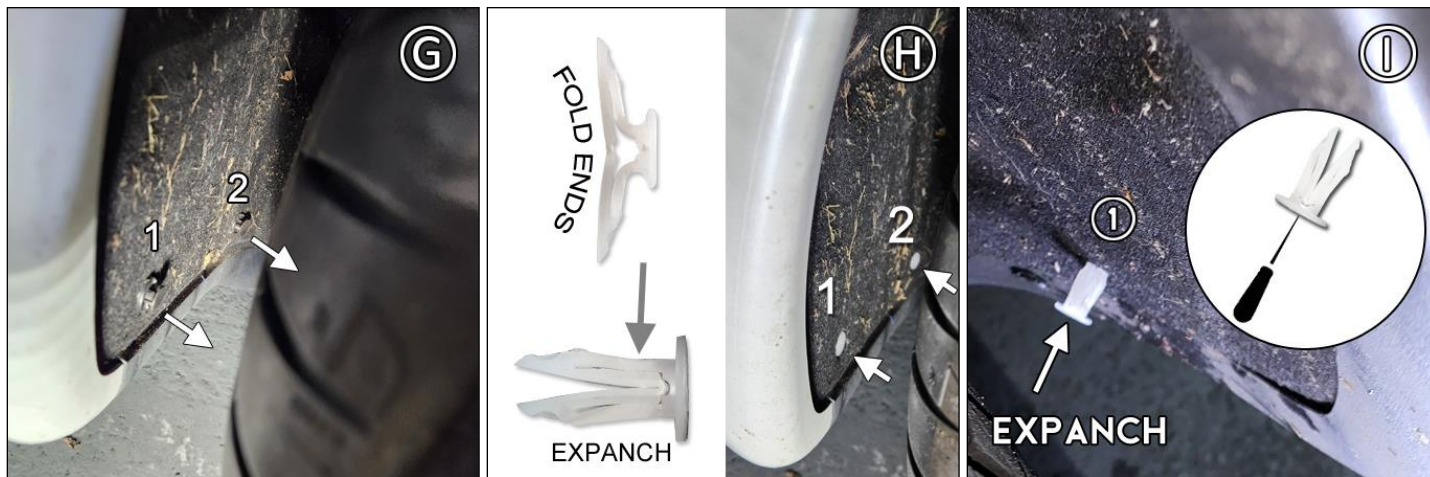


FIGURE J Logo-side of flap facing rear bumper, align to mounts 1 & 2. Loosely install SMWASH & 1SS#8 into mount 2.

FIGURE K Place .25SP spacer behind flap, over mount 1 EXPANCH. Loosely fasten SMWASH & 1SS#8 into mount 1.

FIGURE L For mount 3, align flap edge to flare. Loosely install RACLP over flap and flare, 7.5" from top of flap to center of RACLP. For mount 4, place RACLP 2.25" from top of flap to center of RACLP. Align flap to even ground before finalizing installation of RACLPs.

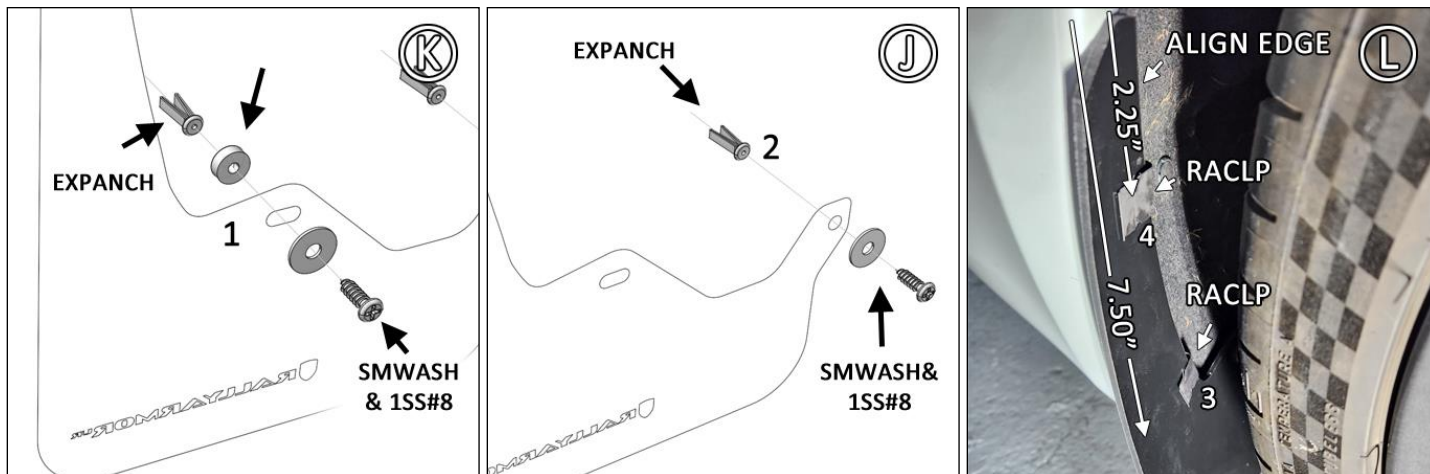

2021+ TESLA MODEL S, S PLAID Installation Instructions

RALLYARMOR®
MF101 MOUNTING DIAGRAM

FRONT

REAR

